

# CHURCHRITE™ BAPTISMAL SERIES

## TOOLS REQUIRED:

- 3/8" Wrench
- 3/8" Socket Wrench with extension
- 3/8" Nut Driver
- Needle Nose Pliers (RHS Only)
- Standard Screw Driver
- Phillips Screw Driver
- Channel Lock Pliers

## QUICK-START INSTRUCTIONS:

These instructions have been designed to assist in the assembly of the ChurchRite baptismal control system. Please follow these instructions closely to assure optimal functionality.

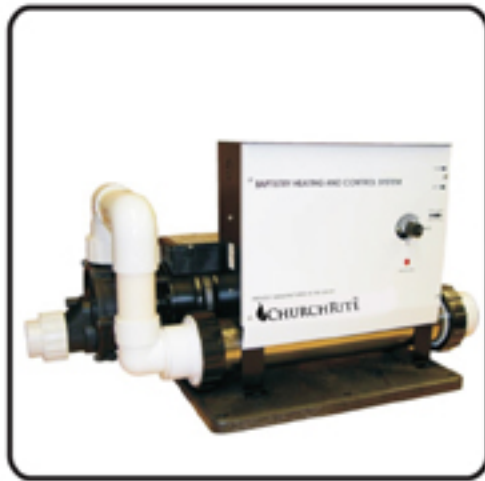


Fig. 1 - Baptismal unit assembled

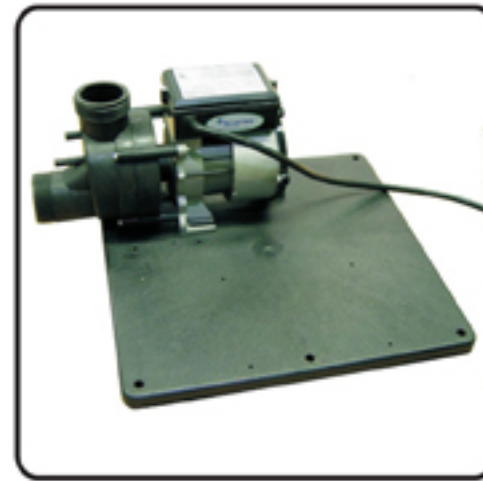


Fig. 2 - Position the pump on the base over pre drilled holes as shown and loosely install self tapping mounting screws.



Fig. 3 - Position the control box on the base over pre drilled holes as shown and loosely install self tapping mounting screws.



Fig. 4 - Install the pump to control box header assembly. Leave loose until everything is lined up properly.



Fig. 4 - Now proceed to tighten all the mounting screws until secure.



Fig. 5 - With everything mounted it is time to "Bond" the pump to the controls box. Use the included #8 bare copper wire to connect the pump to the control box.